




7045B08 - HEADREST PINS OF A FRONT SEAT, LH OR RH - R.R.

Removal

- Carry out Op. 7045B10 - HEADREST OF A FRONT SEAT, LH OR RH - R.R.

1. Rotate pins by 90° to release them from headrest

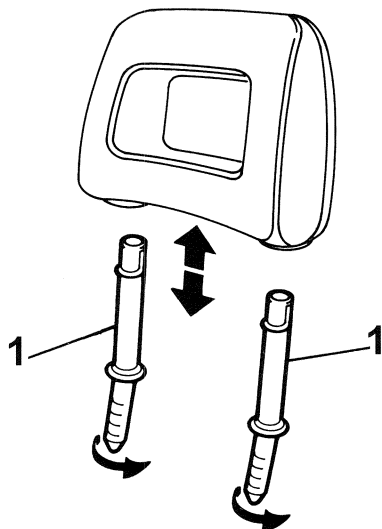

187F7045B08U01B


Reassembly

- Place headrest on pins.
- Rotate pins by 90° to connect them to headrest.
- Complete with Op. 7045B10 - HEADREST OF A FRONT SEAT, LH OR RH - R.R.

7045B10 - HEADREST OF A FRONT SEAT, LH OR RH - R.R.

Removal

1. Rotate headrest pins by 90° to release them from seat frame.
- Remove headrest with pins.

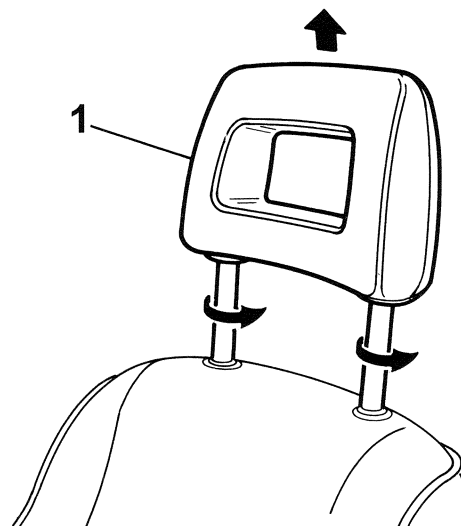

187F7045B10U01B

Reassembly

- Place headrest on seat and rotate pins by 90° to connect them to seat frame.